

SA Power Double Installation


Place the Actulux SA Power Double opening system in the center of the skylight.

- 1) The main part with actuators and arms is lowered into lowered into the skylight body frame and fixed by 4 screws in each end. The LIP box for wire mounting should be placed in the same side as the flap which opens first.
- 2) The upper frame is mounted in the movable flaps.
- 3) All adjustments are made from factory. No further mechanical or electronic adjustments are necessary.
- 4) The actuator can be test operated up and down by connecting a 18-48V battery on the test wires. When the black wheels are aligned with the U-rail cut the plastic strip, which holds the spring loaded wheels. The wheels expand into the U-rails.

Electrical Connection Information

- 1) The opening system **must always** be connected to 24 or 48VDC from the control panel. Connect through terminal 1&2 on the overload interrupter (LIP) that is fitted in series with the actuator, as the actuator has no limit switches.

The actuator will be destroyed if the overload interrupter (LIP) is not installed in series with the actuator. The test cable is not fireproof. Do not use permanent connection.

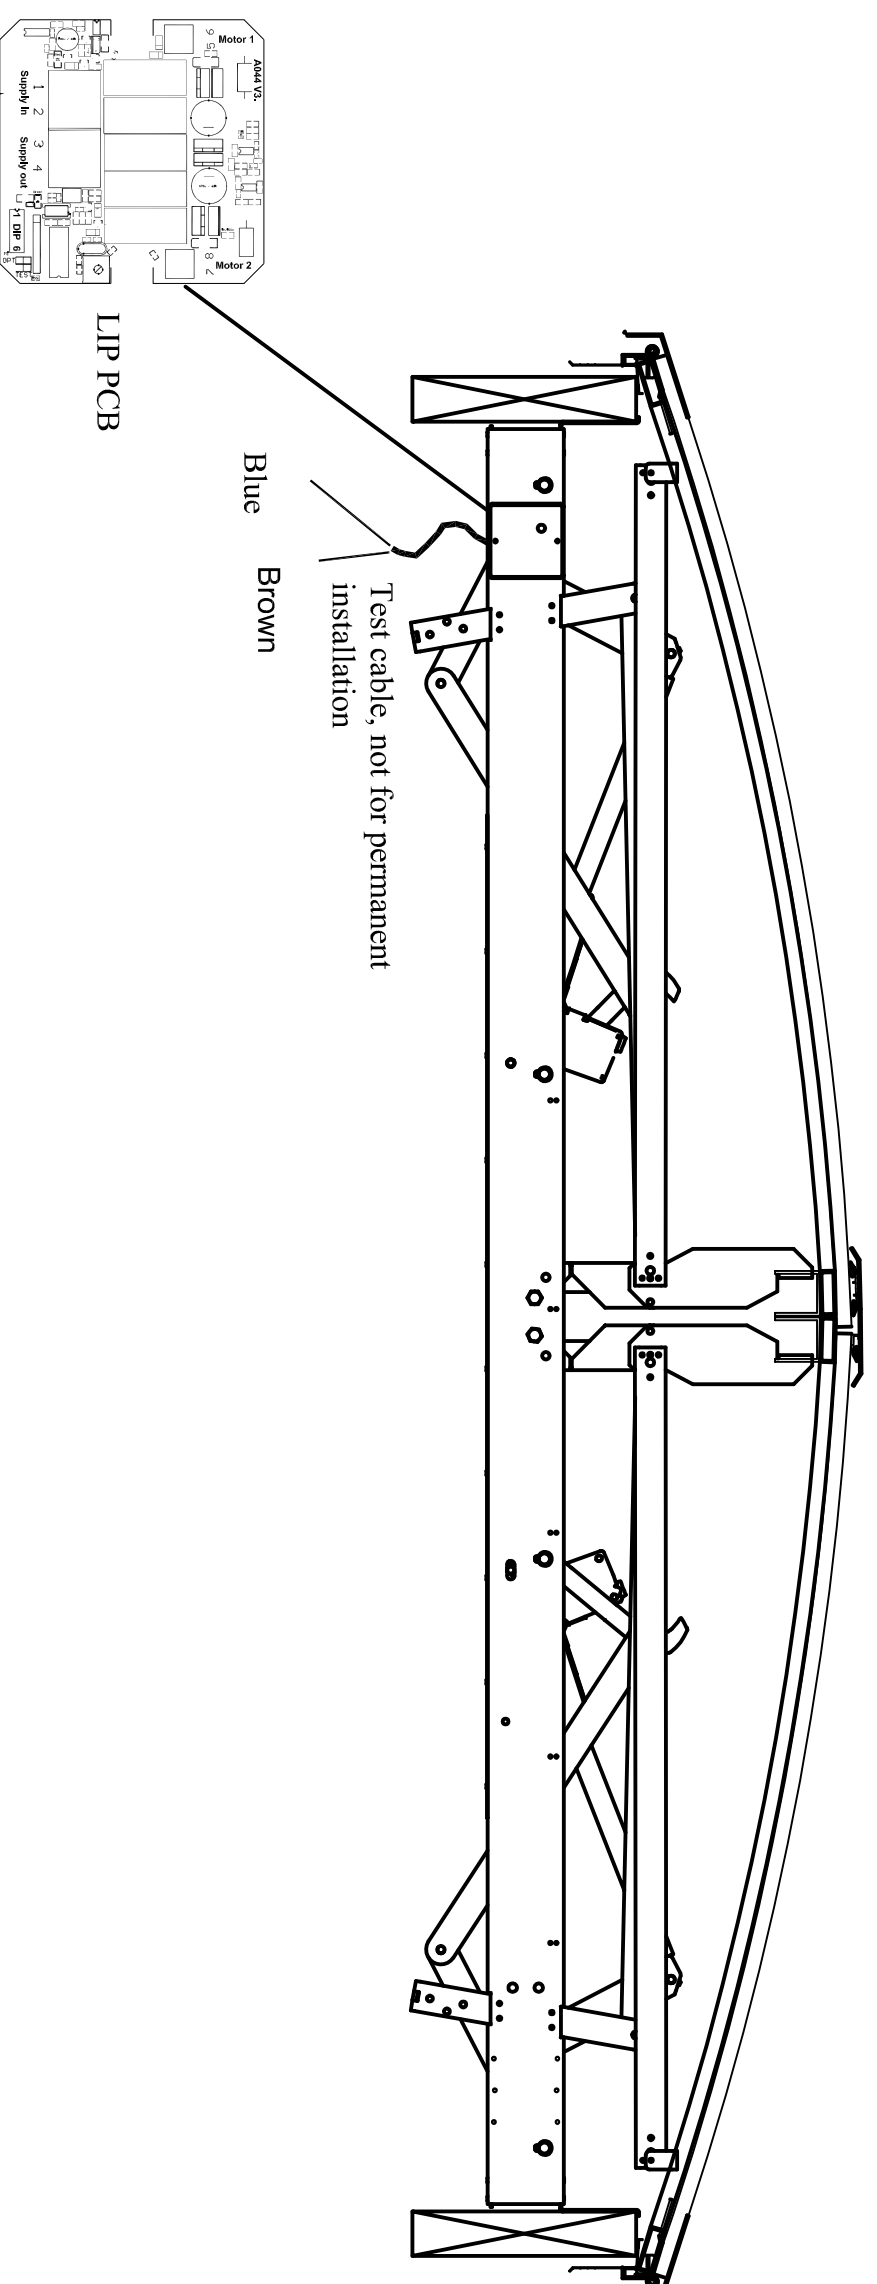

Actulux

Actulux A/S
2. Haandværkervej
DK 9560 Hadsund
Denmark

Phone int.: +45 98 57 40 90
Fax int.: +45 96 15 28 00
e-mail: info@actulux.com
www.actulux.com

800291